



Handleiding P1 Converter


Welkom bij de installatiehandleiding voor de Alp P1 Converter. Deze handleiding biedt stapsgewijze instructies om u te begeleiden bij het correct installeren van de Alp P1 Converter.

Mocht u toch problemen ondervinden tijdens de installatie neem dan telefonisch contact op met Alp-EV via **(085) 246 57 71**

Power Optimizer met ALP P1 Converter

Verbind met
ALP P1 Converter "A"

Verbind met
ALP P1 Converter "B"

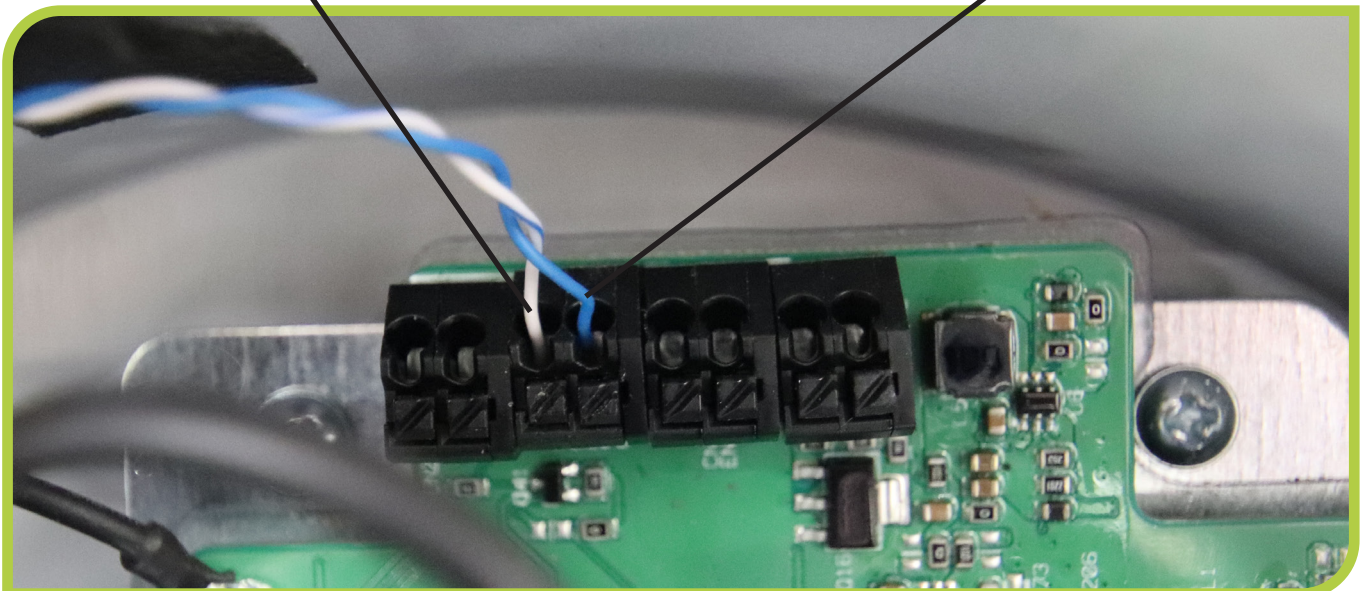

Alp EV
Leursebaan 266,
4814 RE Breda,
The Netherlands

✉ info@alp-ev.com
☎ T +31 (0)85-246 5771

www.alp-ev.com

Sluit aan op P1-poort in energie meter

TIP: Uw energiemeter moet stroom leveren aan de P1-converter, als uw meter geen SMR5-versie is, moet u een actieve P1-splitter gebruiken om stroom te leveren.



Verbind met oplaadpunt terminal (CN20) "A"

Verbind met oplaadpunt terminal (CN20) "B"

EVC04 Configuration Interface English ▼ Log out

Main Page General Settings **Installation Settings** OCPP Settings Network Interfaces Standalone Mode Local Load Management System Maintenance

Earthing System	Operation Mode	<input type="text" value="Normal"/>	Kies de hoofdaansluiting
Current Limiter Settings	Power Optimizer Total Current Limit (A)	<input type="text" value="16"/>	
Unbalanced Load Detection	Power Optimizer External Meter	<input type="text" value="Auto Selected"/> <input type="text" value="P1 Slimmeter"/>	
External Enable Input	<input type="button" value="SAVE"/>		
Lockable Cable			
Charging Mode Selection and Power Optimizer Configuration			
Location			
Load Shedding Minimum Current			